

# **NETSPA ICE BATH**

These instructions are intended to supplement the instructions provided with each assembly component. Their purpose is to clarify the interaction between the components and the specific use of the complete assembly.

## 1. Packaging

Your NETSPA ICE BATH is delivered in a set of four boxes, with an optional fifth box. By assembling the following elements, you will retain all the functions of the spa and add the "*chiller*" function for invigorating and restorative cold baths.


Box 1	Box 2	Box 3	Box 4	Box 5
Bathtub 4-seater	Motor unit	Heat pump	2 connecting pipes	Furniture (optional)
• •				

## 2. Hydraulic connection

First, prepare the components according to their respective instructions. Now, you need to make the hydraulic connections between the pool, the motor unit and the heat pump.

# A Switch off the water and electricity during installation.

- 1. Connect the air hose to the blower.
- 2. Connect the water hose coming out of the spa to the water inlet on the motor unit.
- 3. Connect the water hose coming out of the motor block to the water inlet (IN) of the heat pump using one of the connection hoses supplied in box 4.
- 4. Connect the water outlet hose (OUT) of the heat pump to the water inlet of the spa.

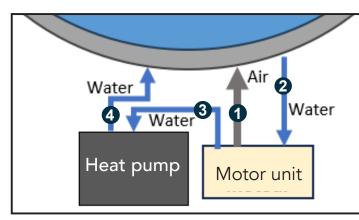









# 3. Heat pump settings

In order to take advantage of the "chiller" functions ( $T^{\circ} < 5^{\circ}C$ ), advanced parameter C11 on the heat pump must be set to 2°C. This setting allows cooling down to 3°C. To change this setting, refer to your heat pump manual.

- 1. Switch off the heat pump.
- 2. Press the button (b) for 3 seconds to view the parameters.
- 3. Use the  $\checkmark$  and  $\checkmark$  arrows to navigate until you reach parameter C11.
- 4. Confirm by pressing the button (a).
- 5. Change the value using the  $\frown$  and  $\bigcirc$  arrows.
- 6. Confirm the new value by pressing the button  $(\mathbf{z})$ .

#### 4. <u>Use</u>

Refer to the motor unit and heat pump manuals for optimum use.

A However, always deactivate the engine block heater when using your NETSPA ICE BATH in cold mode.

When the engine block heating is active, a red light will illuminate next to the dedicated button: (). If the red light is on, press () to deactivate the engine block heater.

A For safety reasons, the filtration pump stops when the water temperature drops below 4°C. Make sure you restart the filtration when the temperature rises again.

 
#### 5. Option: dress up your installation.

You can position the spa furniture around the spa in any order you like.

The motor block cover can also be used to hide your heat pump.

#### Remember to have a towel ready to wrap around you when you come out of the cold bath.







Comfort bench


**et** Spa









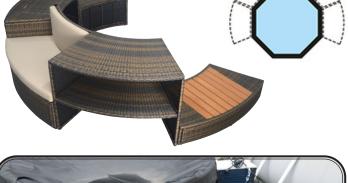



Dear customer,

A question? A problem? Or simply register your warranty, find us on our website:

# https://assistance.poolstar.fr/

Thank you for you trust and support. Happy bathing!

Your personal information is processed in accordance with the French Data Protection Act of 06 January 1978 and will not be shared with 3rd parties.

